PARKSIDE

PNTS 1400 A1

GB IE

WET & DRY VACUUM CLEANER

Translation of original operation manual



GB IE

Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

A

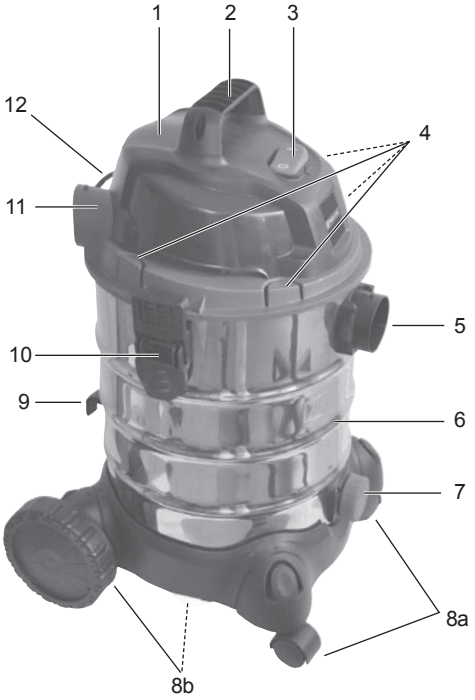

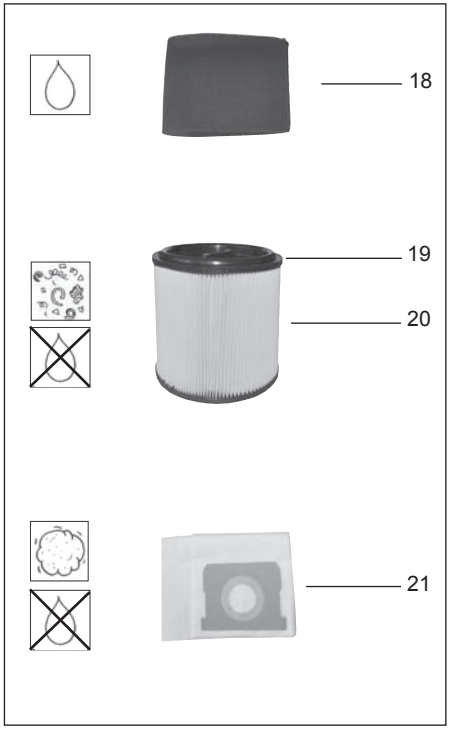

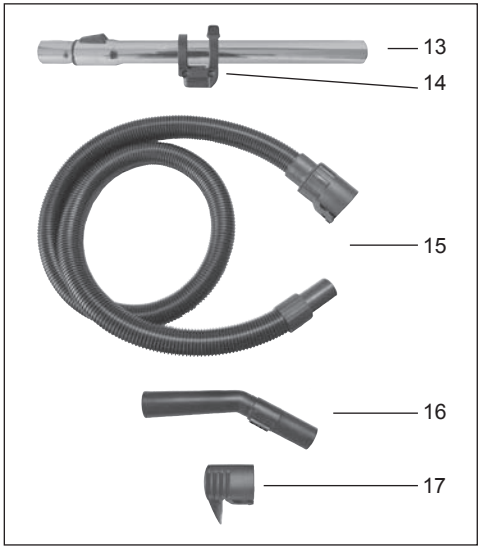

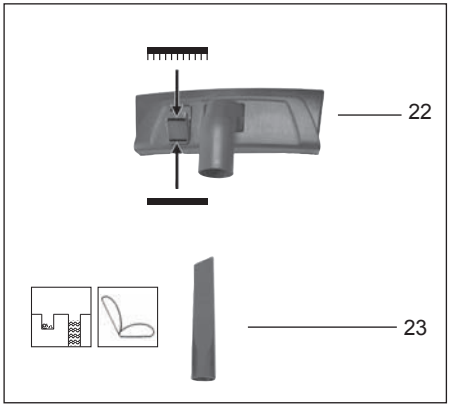

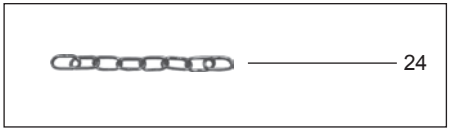

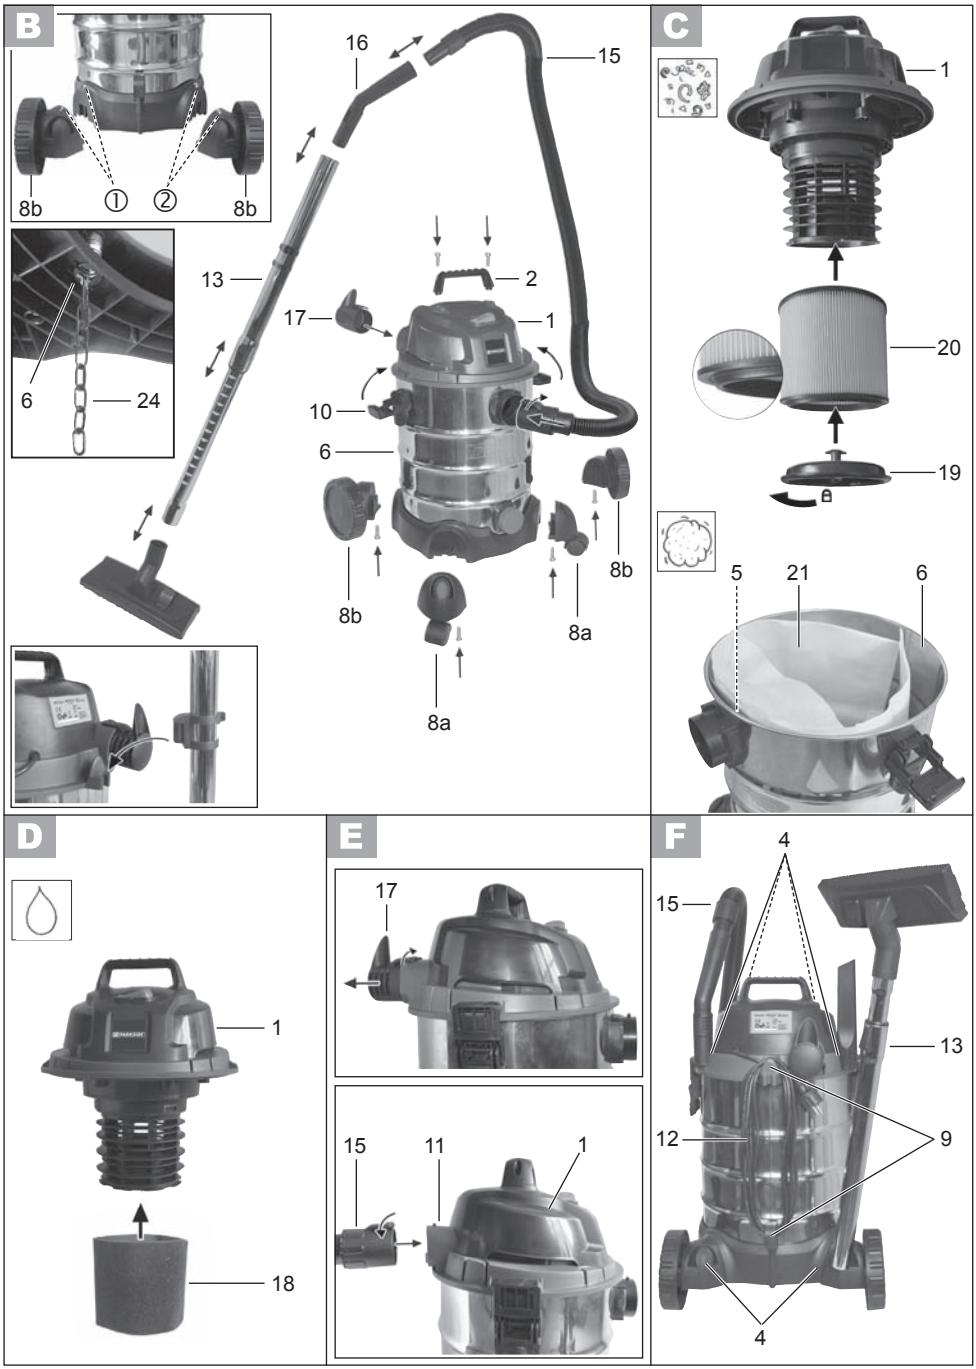
B
8b
①
②
8b
16
15
13
2
17
1
10
6
8b
8b
8a
8a
6
24
C
1
20
19
5
21
6
D
1
18
E
17
15
11
1
F
4
15
13
12
9
4

Contents

Application 5
Symbols used in the instructions 5
Safety information 5
Description of operation 6
Overview 7
Delivery Contents 7
Assembly 8
Switching on/off 8
Dry vacuuming 8
Wet vacuuming 9
Blow Function 9
Cleaning/Maintenance/Storage 9
Replacement parts 10
Disposal/Environmental protection ... 10
Technical data 10
Warranty 11
EU declaration of conformity 11
Trouble shooting 12
Exploded Drawing 13
Grizzly Service-Center 13

Application

The appliance is intended for domestic wet and dry vacuuming in, for example, the house, work room, car or garage.
Vacuuming of flammable or explosive materials or those which endanger health is prohibited. The manufacturer will not be held responsible for injuries resulting from use which does not comply with the directions, or from incorrect use.

Symbols used in the instructions

Hazard symbols with information on prevention of personal injury and property damage.

Precaution symbol with information on prevention of harm / damage.

Notice symbol with information on how to handle the device properly.

Safety information

Before initial start-up, please read through these operating instructions carefully prior to using the machine. Keep the instructions safe and pass them on to any subsequent user so that the information is always available.

Caution! When using electrical machines, observe the following basic safety measures for the prevention of electric shocks and the risk of injury and fire:

To avoid accidents and injuries:

- Children must be supervised in order to ensure that they do not play with the equipment.
- Children should only be allowed to use the appliance under supervision.
- Never allow children or other persons unfamiliar with the user manual to use the shredder. Local regulations or by-laws may determine the minimum age for using the device.
- Never leave a machine which is ready for operation unattended at the workplace.
- People and animals must not be vacu-

umed using the machine.
- Do not vacuum any hot, incandescent, flammable, explosive materials, or those which endanger health. This includes hot ashes, petrol, solvents, acids or caustic solutions. Personal injury could occur.
- Nozzles and suction tubes must not reach head level whilst in use. Personal injury could occur.

To avoid accidents and injuries from electric shocks:
- Ensure that the mains cable is not damaged by being pulled over sharp edges, by jamming, or by pulling on the cable.
- Before each use, check the power supply lead and the extension cable for damage and ageing. Do not use the equipment if the cable is damaged or worn. Danger of electric shock hazard.
- If the power cable for this equipment is damaged, it must be replaced by the manufacturer, a customer service agent of the same or a similarly qualified person in order to prevent hazards.
- Switch the machine off and pull the plug under the following circumstances:
  - when you are not using the device,
  - transporting it or leaving it unattended;
  - when you are checking the device, cleaning it or removing blockages;
  - when you are carrying out cleaning or maintenance work or replacing accessories;
  - when the power or extension cable is damaged; after contact with foreign bodies or in case of abnormal vibration.
- Only use replacement parts and accessories delivered and recommended by our Service Centre (see addresses page 13). The use of parts by other manufacturers immediately renders the guarantee void.
- Do not use the cable to pull the plug out of the socket. Protect the cable from heat, oil, and sharp edges.
- Make sure that the mains voltage corresponds with the information on the rating plate.
- Only plug the appliance into a socket which is safeguarded by at least 16A.
- The device must only be connected to a mains socket via a residual-current circuit breaker (RCD) with a rated leakage current of not more than 30 mA.

The following states how damage to the appliance and possible injury to people can be avoided:
- Ensure that the machine is correctly assembled and the filters are in the correct position.
- Do not use without the filter. This could damage the machine.
- Only have repairs carried out at our authorised customer service points.
- Observe the instructions for cleaning and maintenance of the machine.
- Store the appliance in a dry place and out of reach of children.

Description of operation

The equipment is fitted with a stable stainless steel container to hold liquid and dust. The wheels and swivel castors give the equipment great mobility. For wet vacuuming, the suction airflow is switched off by a float when the stainless steel container is full. The equipment also has a blow function.The following describes the function of the operating parts.

See the front fold-out page for illustrations.

Overview

A

Housing

1 Motor housing
2 Carrying handle
3 On/off switch
4 4 Pin ports for accessories
5 Suction connection
6 Stainless steel container
7 Drainage outlet
8a 2 feet with castors and accessory fittings
8b 2 feet with wheels and accessory fittings
9 Cable holder
10 Sealing clip
11 Blow connection
12 Mains power cable
13 Telescopic suction pipe

Accessories

14 Vacuum tube holder
15 Suction hose
16 Handle with air regulation
17 Air diffuser

Filter

18 Foam filter for wet vacuuming
19 Filter cover
20 Fluted filter for dry vacuuming
21 Paper filter bag for fine dust

Nozzles

22 Switchable household nozzle
▬ for vacuuming carpets
for vacuuming smooth surfaces
23 Crevice nozzle
24 Antistatic chain

Delivery Contents

Unpack the equipment and check that it is complete.
The equipment is supplied with the motor head on (see A no. 1).
To take off the motor head and remove the accessories, open the fixing clips (see A no. 10).

- Motor housing
- Carrying handle
- Stainless steel container
- 2 feet with castors and accessory fittings
- 2 feet with wheels and accessory fittings
- Telescopic suction pipe
- Suction hose
- Handle with air regulation
- Air diffuser
- Foam filter
- Fluted filter + filter cover (already mounted)
- Paper filter bag
- Switchable household nozzle
- Crevice nozzle
- Antistatic chain
- 6 cross-head screws

Dispose of the packaging material in a proper manner.

Assembly

Pull out the mains plug.
Danger of electric shock.

The package contains an antistatic chain which you may wish to install at the bottom of the appliance to avoid electrostatic charge during operation.

B

1. Attach the antistatic chain (24) to the metal hook at the bottom of the stainless steel container (6) (see small picture in the middle).
2. Screw on the carrying handle (2) with the enclosed cross-head screws.
3. Place the feet (8a+b) on the casing:
   - The feet with the swivel castors (8a) in the sockets on the front of the container (6)
   - The feet with the wheels (8b) with the imprinted numbers ① + ② into the corresponding holes on the back of the container (see small picture above).
4. Attach the feet using the enclosed cross-head screws.
5. Fit the motor head (1) onto the stainless steel container (6) (see picture **B**) and fix it with the fixing clips (10).
6. Plug the air diffuser (17) into the blow connection (11) (bayonet fixing).
7. Fit the accessories:
   - Connect the suction hose (15) (bayonet fixing).
   - Fit the handle (16)
   - Fit the telescopic suction pipe (13). (Press the knob on the telescopic suction pipe in the ⩓ direction and separate to the desired length).
   - Fit the desired nozzle.

To store the suction set during breaks, push together the telescopic suction hose and plug the suction pipe holder into the socket on the motor housing (see small picture below).

Switching on/off

Connect the mains plug.

Do not vacuum without a filter! (How to insert the filter is described in the chapters “dry vacuuming“ and “wet vacuuming“).

Switching On:
On/Off Switch (see **A** no. 3)
In position “**I**“

Switching Off:
On/Off Switch (see **A** no. 3)
In position “**0**”

C Dry vacuuming

1. For dry vacuuming, fit the pleated filter (20) onto the filter basket on the motor head (1). The sealing lip that curves upward must point away from the motor head.
2. Fit the filter cover (19) and lock it with a light turn:

Lock the filter cover

Unlock the filter cover

Vacuuming fine dust:

While vacuuming fine dust, you may find dirt accumulating faster than usual. For this reason, we recommend the use of a paper filter bag for fine dust.

1. Fit the pleated filter (20).
2. Completely unfold the paper filter bag (21) and pull it over the internal suction nozzle (5) in the stainless steel container (6) (see ➡). The connector on the suction nozzle must be completely enclosed by the sealing ring on the filter bag opening.

D Wet vacuuming

For wet vacuuming or to vacuum water, fit the foam filter (18) to the filter basket on the motor head (1).

When the container is full, the suction opening is shut off by a float, and suction is then cut off.
Switch the appliance off, remove the plug from the socket and empty the container (see Cleaning/ Maintenance/Storage).

If foam or liquid exits, switch off the machine immediately.

E Blow Function

- To blow, take off the air diffuser (17) (bayonet fixing).
- Screw the suction hose (15) (bayonet fixing) onto the blow connection (11) on the motor head (1).

Cleaning/Maintenance/ Storage

Pull out the mains plug.
Danger of electric shock.

Always check the appliance before use for any obvious faults such as a defective mains cable, and have these repaired or replaced.

Cleaning the Equipment:

Never hose the appliance down with water. Never use aggressive cleaning agents or solvents. This could damage the appliance.

- After use, empty the stainless steel container (A No. 6). Opening the drain plug to allow the vacuumed liquid to drain out (A No. 7).
  A liquid residue remains in the container.
- Clean the waste tank with a damp cloth.
- Wash the foam filter (A No. 18) with lukewarm water and soap, and allow to dry.
- Beat the dust out of the fluted filter (A No. 20) and clean it with a paint brush or hand brush.
- Replace the paper filter bag (A No. 21) when full (see “replacement parts” for reordering)
- Wash out the air diffuser filter (see A no. 17) with lukewarm water and soap a leave it to dry.

Storage:

F - To store, wind the mains power cable (12) around the cable holder (9) on the back of the

equipment.
- The pin ports (4) on the motor head and on the equipment feet provide storage for the telescopic suction pipe (13), suction hose (15) and nozzles.

- Store the appliance in a dry place and out of reach of children.
- Always check the appliance before use for any obvious faults such as a defective mains cable, and have these repaired or replaced.

Replacement parts

You can order replacement parts directly via our Service Centre (see addresses page 13). Please state the appliance type when placing an order.

Foam filter, pack of 3 30250100
Paper filter bags, pack of 5 30250132
Fluted filter for dry vacuuming 91092030
Telescopic suction pipe 91092024
Suction hose 91092025
Handle with air regulation 72800038
Crevice nozzle 72800039
Switchable household nozzle 72800214

Disposal/Environmental protection

Be environmentally friendly. Return the tool, accessories and packaging to a recycling centre when you have finished with them.

Machines must not be disposed of with household refuse.

Take the machine to a recycling point. The waste plastic and metal parts can be separated, accurately graded and passed on for recycling. Contact our Service Centre for more details.
Defective units returned to us will be disposed of for free.

Technical data

Power consumption of motor ..... 1400 W
Mains voltage ..... 230 V~, 50 Hz
Safety class ..... ⧈ II
Protection category IP24
Suction force ..... 16 kPA, 2.2 m^3/min
Cable length ..... 4 m
Stainless steel container
capacity (brutto) ..... 23 l
useful volume ..... 15 l
Weight (incl. all accessories) ..... 6.5 kg

Technical and visual modifications may be carried out due to further development without prior notice. All dimensions, information and statements provided in these Operating Instructions are therefore subject to amendment. Legal claims which are based on the Operating Instructions can therefore not be recognised.

Warranty

This unit has a guarantee period of 36 months, or 12 months for units used on a commercial basis or for replacement units according to the statutory regulations. Damage resulting from normal wear and tear, overloading or improper use is excluded from the warranty. Certain parts such as the filters and attachments are subject to normal wear and tear and are excluded from the warranty.
Warranty claims can only be recognised if the directions in the Operating Instructions on cleaning and maintenance have been followed. Damage resulting from material defects or manufacturing errors will be rectified at no extra charge by replacement or repair, on condition that the appliance has not been dismantled and is returned to our Service Centre with proof of purchase and guarantee (see addresses page 13).
You can have repairs which are not covered by the warranty carried out by our Service Center which will charge you for this. They will be happy to draw up a cost estimate for you.
We can only carry out work on machines which have adequate packaging and postage.
Warning: In the case of a warranty claim or a service, please deliver your machine to our service address in a clean condition accompanied by a description of the problem.
Machines sent without prepaid postage – as bulky goods, express, or by special freight – will not be accepted.
If you have a justified guarantee claim, please contact our service centre by telephone, which will then advise you on how the claim will be processed.
Defective units returned to us will be disposed of for free.

EU declaration of conformity

We hereby confirm that the
wet and dry vacuum cleaner
model series PNTS 1400 A1
Serial no. 1006000601-1008090417

conforms with the following applicable relevant version of the EU guidelines
as of model year 2010:

2004/108/EC • 2006/95/EC

In order to guarantee consistency, the following harmonised standards as well as national standards and stipulations have been applied:

EN 60335-1/A13:2008
EN 60335-2-2/A2:2006
EN 55014-1:2006
EN 55014-2:1997/A1:2001
EN 61000-3-2:2006
EN 61000-3-3:1995/A2:2005
EN 62233:2008

Grizzly Gartengeräte GmbH & Co. KG
Am Gewerbepark 2
64823 Groß-Umstadt 18.05.2010

Andreas Gröschl
(Technical Manager and
Documentation Representative)

Trouble shooting

Problem	Possible cause	Fault correction
Device does not start	Mains voltage is not present	Check plug socket, cable, line, plug and fuse, where appropriate, repair through electrical specialist
	Defective on/off switch (A 3)	Repair through customer service
	Worn carbon brushes	
	Defective motor	
Low or lack of suction	Hose system (A 15) or jets (A 22, 23) blocked	Remove obstructions and blockages
	Suction pipes (A 13, 16) assembled incorrectly	Assemble suction pipes correctly
	Container (A 6) open	Close container
	Container (A 6) full	Empty container
	Filter (A 18, 20, 21) full or clogged	Empty, clean or replace filter

Exploded Drawing

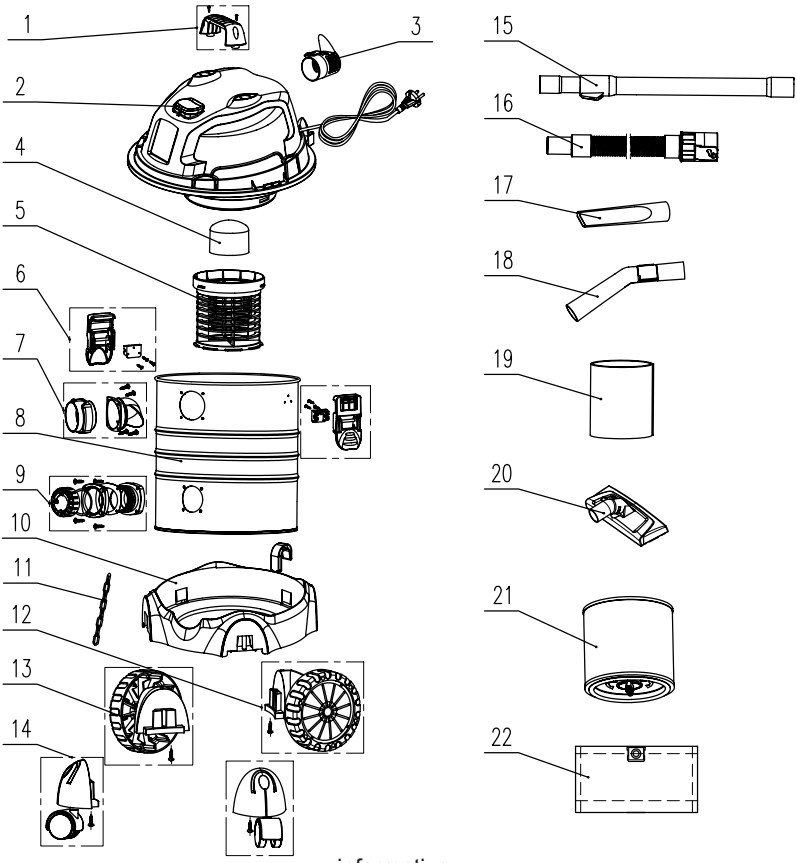

informative

Grizzly Service-Center

DES UK Ltd.
Unit B7
Oxford Street Industrial Park
Vulcan Road
Bilston, West Midlands WV14 7LF

Tel.: 0870 787 6177
Tel. from Ireland: 0044 870 787 6177
Fax: 0870 7876168
Fax from Ireland: 0044 870 787 6168
Email: grizzly@deslimited.com

IAN 53353

Grizzly Gartengeräte GmbH & Co. KG
Am Gewerbepark 2
D-64823 Groß-Umstadt

Last Information Update: 06/2010
Ident.-No.: 720803250620106